



Table 31

Brakes, Front Wheel Brake

Group 42

Fig. No.	No. of spare part	Denomination	Quantity	Remarks
Brake Shoe, Front				
1	198 420 04 20	Brake shoe with lining, pasted on	4	
2	188 421 02 10	Brake lining	4	} for replacement delivery (to rivet, not pasted)
3	183 990 02 95	Tubular rivet	48	
4	186 421 06 74	Pin (for automatic brake adjustment)	4	} at brake anchor plate
5	186 991 43 40	Spacer sleeve	4	
6	—	Lock washer B 10 DIN 127	4	} for pin at brake anchor plate
7	—	Hex. nut M 10×1 DIN 936-5 S	4	
8	186 421 00 37	Adjusting sleeve M 12×1 internal thread	4	} for automatic brake adjustment at brake shoe
9	194 421 00 32	Friction disc	8	
10	194 990 01 40	Thrust washer	4	
11	194 993 00 01	Pressure spring	4	
—	180 990 13 40	Shim	a.r.	
12	180 421 03 71	Tightening screw M 12×1 external thread (for pressure spring)	4	} for automatic brake adjustment at brake shoe and brake anchor plate
13	186 421 07 74	Guide pin	4	
14	136 990 14 40	Washer 15×6×1	4	
15	186 993 74 01	Pressure spring	4	
16	—	Cotter pin 3×15 DIN 94	4	
17	188 993 01 10	Release spring (for brake shoes, front)	4	
18	188 421 01 18	Pin (for brake shoe suspension)	4	
19	—	Washer 13 DIN 433	4	for pin, brake shoe suspension