



1 Einstellschraube      adjustscrew   valve adjustment

2 Kontermutter      rearnut

3 Ventilstößel      valve tappet

valve adjustment

hold 3      open 2      adjust, left or right by 1 and tighten 2 with 3

Willi Dürr 05.10.2020